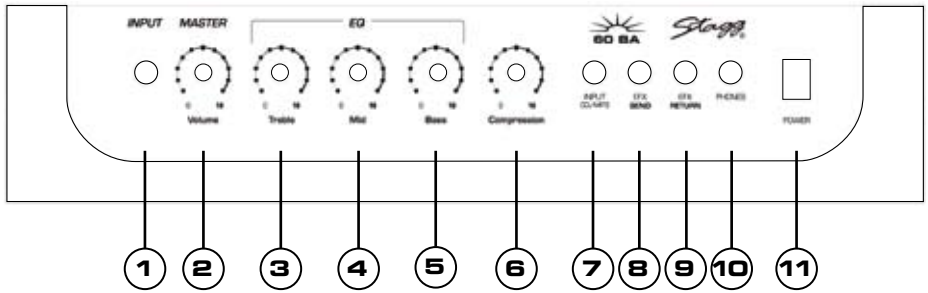

FRONT PANEL:

1. INPUT: Plug your bass in here. We recommend that you always use a high-quality shielded cable to prevent any background noise interference or unwanted feedback.

2. VOLUME: This control determines the output volume of the amplifier.

3. TREBLE: This control determines the level of high frequencies in the output signal. Adding TREBLE will make your bass sound brighter and sharper.

4. MID: This control determines the level of middle frequencies in the output signal. Adding MID will make your bass sound rounder and fuller.

5. BASS: This control determines the level of low frequencies in the output signal. Adding BASS will make your bass sound warmer and heavier.

6. COMPRESSION: This control reduces the dynamic range of the output signal and evens out the changes in volume that occur according to how hard you play your instrument. Adding COMPRESSION will make your bass sound smoother and clearer.

7. CD/MP3 INPUT: This is a line level 1/4" (Ø 6.3 mm) stereo jack into which an MP3/CD/Tape player may be connected.

8. EFX SEND - This amplifier is equipped with an effects loop which allows you to plug effects between the preamp and the power amp. The EFX SEND jack is a line level 1/4" (Ø 6,3 mm) output jack into which you may connect one or several outboard effects, eg Flanger, Delay, Chorus etc. The EFX SEND should be connected to the input jack of the first effect in your chain.

9. EFX RETURN - This is a line level 1/4" (Ø 6,3 mm) input jack into which you should connect the output jack of the last effect in your chain. The effects loop may also be used with a multi-effects rack system, or with a single effect.

10. PHONES: This is a 1/4" (Ø 6.3 mm) standard jack output to connect the headphones. When headphones are connected, no sound is produced from the speaker.

11. POWER: This switch turns the amplifier on or off**.** The switch is illuminated when the device is powered on.

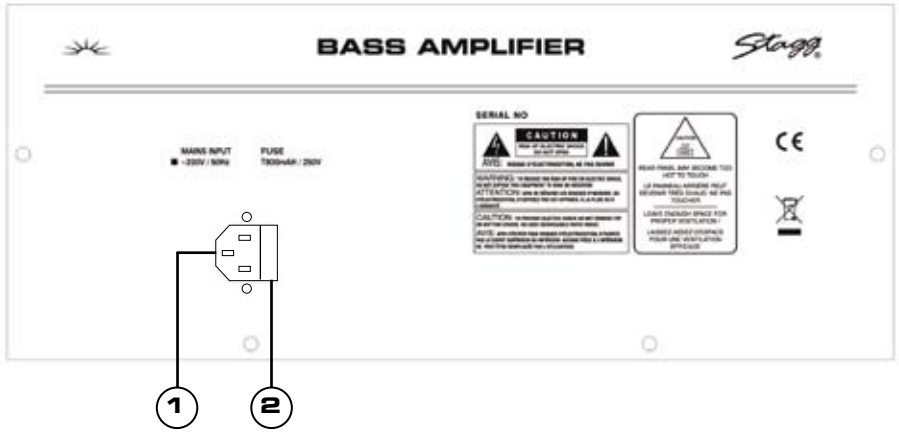

BACK PANEL:

WARNING: This amplifier must be earthed. Please check that the supply voltage details given on the rating label (located on the rear panel) are in accordance with your electricity supply.

(1) **MAINS INPUT:** This is the input socket into which the mains power cable must be connected. This amplifier is supplied with a power cable with a moulded-on plug. If the socket outlets in the home are not suitable for the plug supplied with this amplifier, use an appropriate plug adapter that can handle the power required for this amplifier.

(2) **POWER FUSE:** In the event of the power fuse having to be replaced, first unplug the power cable from the mains outlet. Then remove the fuse cover and replace the power fuse with one of the same type and value. Never plug the power cable back into the mains outlet without the fuse cover. When powering on the amplifier, if the power fuse blows up again, go to a suitable service centre for repair.

TECHNICAL SPECIFICATIONS	
Max. Rated Power / Loudspeaker	60 Watts RMS @ 4 Ohms load / 12" Speaker
Frequency Response	80 Hz to 15 kHz
Total Harmonic Distortion	0.8%
Signal to Noise Ratio	- 60 dB @ max Rated Power
Input Impedance	220k Ohms
Power Consumption	90 Watts max
Maximum Input Level	65 mV (RMS)
Maximum Gain	47 dB (@ 1kHz)
Dimensions (H x W x D)	45.5 x 49.5 x 27.5 cm / 17.9 x 19.5 x 10.8 in
Weight	19.5 kg / 43 lb

Features and Specifications are subject to change without notice.

INSTRUCTIONS FOR USE:

Plug the mains lead into a suitable power socket and connect your instrument to the input socket of the amplifier with a suitable guitar lead (this lead is not supplied with the amplifier, but is normally supplied with the electric guitar). Finally, press the Power Switch to the ON position, the power switch will light up and your amplifier is ready for use.

IMPORTANT SAFETY INSTRUCTIONS:

READ AND KEEP THESE INSTRUCTIONS HEED ALL WARNING.

• If, after you have followed the instructions outlined above, your amplifier fails to function, please contact your dealer. Under no circumstances should the amplifier be opened. Leave all servicing to qualified personnel.

• Electrical appliances must never be used in conditions of high humidity or heat.

To prevent any risk of fire or electric shock, never spill or splash liquids on the amplifier.

Should this happen, unplug the power cable from the mains outlet immediately.

• We would like to draw your intention to the instructions printed on the notice attached to the back of the amplifier.

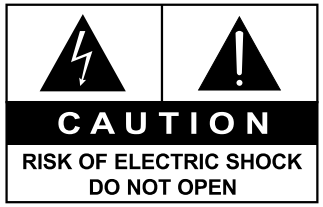

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT REMOVE TOP OR BOTTOM COVERS.
NO USER SERVICEABLE PARTS INSIDE.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK. DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

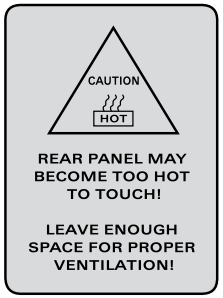

• Exposure to extremely high noise levels may cause permanent hearing damage (especially when using headphones). Please use this amplifier responsibly for you and your neighbourhood.

MARKING & CONFORMITY:

1. The CE mark on this product means it conforms to the EMC Directive (89/69/EEC), CE marking Directive (93/68/EEC) and Low Voltage Directive (72/23/EEC).

2. The «Crossed-out Wheeled Bin» is to draw your attention to the WEEE (Waste Electric & Electronic Equipment) Directive (2002/96/EC). It means this apparatus must be collected separately for recycling.

3. «RoHS compliant» means this device conforms to the Directive (2002/95EC) on the restriction of the use of certain hazardous substances in electrical and electronic equipments, such as: Mercury, Lead, Cadmium, Hexavalent Chromium, Polybrominated Buphenyl (PBB) and Polybrominated Diphenyl Esthers (PBDE).

DISTRIBUTOR/DEALER

RoHS compliant

EMD Music 01-2008-UK

USER'S MANUAL

BASS GUITAR AMPLIFIER

60 BA